
# **OPERATION INSTRUCTION** Video intercom system

Outdoor Camera User Manual


#### 1. OVERVIEW

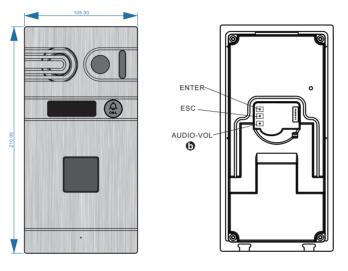

#### The speaker volume is too low, how to increase it?

At the backside of outdoor unit ,you can find out a regulator( Marked as (5) ) which is used to adjust the speaker volume, turn the regulator with the screwdriver to decrease/increase the speaker volume.


### 2. WIRING DIAGRAM

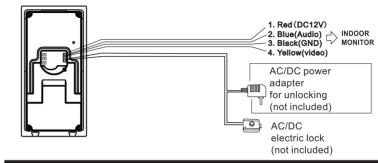

## 3.PRODUCT SPECIFICATIONS

Camera sensor	1/4;1/3 inch pinhole CCD/COMS camera		
View angle	60°/(120°)		
Definition(Hor.)	420/480/600/700/800 TV Line		
LEDs for night	IR LEDs(60°)		
Power consumption	150mA max.		
Power supplier	Supplied from indoor unit		
Operation temp.	-40~+50°C		
Installation	Surface/flush mount		


# 4.INSTALL ATION DIAGRAM

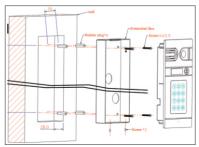



- "#"- you will heard long Beep sound-press ESC
- 2:Add IC card: Press "Enter"- Swiping card-you
- will heard long Bee sound-press ESC
  3: Add fingerprint: Press "Enter" input fingerprint two
  times- you will heard long Bee sound-press ESC

### 5.INSTALLATION PROCESS OF OUTDOOR UNITS

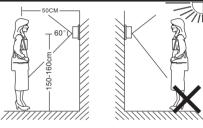



### NOTE:

- . Avoid installation of the device near strong radiation e.g. AC motor and lift .
- . Maintenance should be complied with qualified technician .
- . Avoid hard shake , beating and collision ,otherwise the internal exact components maybe be
- . Do not expose the outdoor camera under strong light or sunshine.
- Do not install the outdoor camera in the environment e.g. direct sunlight ,contact rain ,High temperature, high humidity, full of dust and chemistry corrosive.
- Select the most suitable position where the camera is located at user's eye level
- · Switch off power supply before installation.
- . Keep more than 30cm away from AC power supply to avoid external interference.
- . Keep it away from the water and magnetic field.



